

CLEAN VAPOR JUNIOR




Bieffe Srl Via Levato 1/1-1/3 61100 Pesaro
Tel. 0039 0721281857 Fax 0039 0721281880
www.bieffeitalia.it info@bieffeitalia.it

We have been creating and manufacturing steam generators and ironing boards for more than 20 years.

We apply our knowledge and experience to several fields: sewing, household, catering, cosmetics, etc...

Mr. Farinelli thanks you

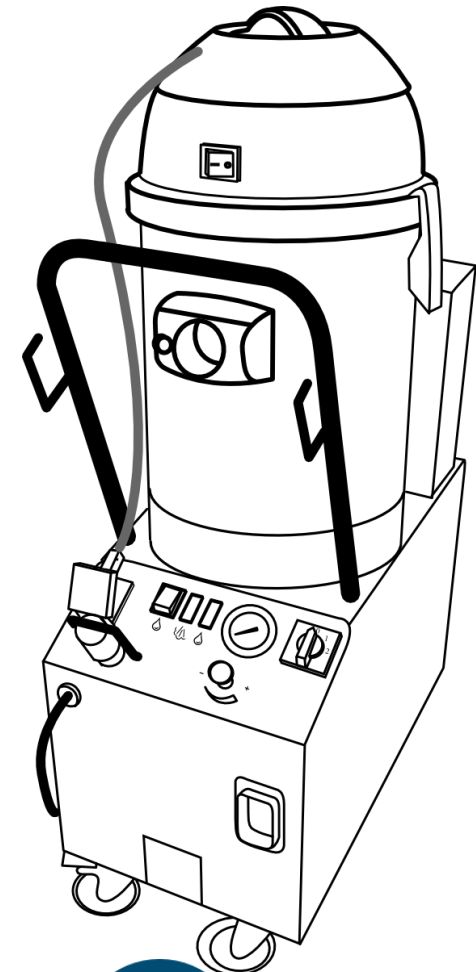

*Information, descriptions and illustrations contained in this manual are not binding.
BIEFFE maintains the right to introduce any necessary change. June 2011*

MADE IN ITALY: BIEFFE Company manufactures the whole range of its products in Pesaro using components made in Italy as well as entirely recyclable materials.


OPERATING AND SAFETY INSTRUCTIONS

- After the removal of the package make sure of the appliance's integrity. In case of doubt do not operate the appliance but take it to a qualified service person for examination and repair. Plastic bags, polystyrene, etc..., must be kept out of the children's reach.
- Before connecting appliance, make sure that data on the plate are the same as the power supply network. The voltage appliance is of 230V monophasic with a plug of 16A+T.
- Plug appliance into grounded outlet of sufficient power as provided for by the safety regulations in force.
- Do not touch appliance with wet or damp hands.
- Always disconnect appliance from electrical outlet when not in use.
- This appliance is only and exclusively for its intended use so the manufacturer can not be held responsible for any probable damage due to an illegitimate use.
- Never unscrew the safety valve cap during use.
- Before cleaning and maintenance make sure that appliance is disconnected from outlet. Do not wash the appliance, do not immerse in water. Before filling the boiler, make sure that appliance is unplugged.
- In case of failure or operational defect, turn off appliance, disconnect from electrical outlet. Do not disassemble or attempt to repair the appliance. Incorrect re-assembly or repair could cause a risk of fire, electric shock, or injury to persons when the appliance is used. Any repair must be executed by qualified service persons authorized by the manufacturer. Ask for exclusive use of original spare-parts.
- Installation must be executed according to manufacturer's instructions (space for ventilation, room temperature).
- Do not operate appliance with damaged cord or hose, but let it made replaced.
- Turn off the two boiler switches, and unplug the boiler when finished operating. It is not necessary to empty the boiler of remaining water. it is important to unscrew for only 1 turn the safety cap to let the boiler depressurize.
- Do not remove safety device and protective cover.
- Do not service while appliance operates.
- Before servicing make sure that appliance is unplugged from electrical outlet.
- THE NON-OBSERVANCE OF THE ABOVE OPERATING AND SAFETY INSTRUCTIONS COULD PREJUDICE SAFETY.

Have a good job.

CONTENTS AND LABELS


- Pc. 1 Steam generator with basket accessories
- Pc. 1 Exhauster (stainless drum and vacuum motor)
- Pc. 2 Tank 5LT
- Pcs. 20 Standard accessories

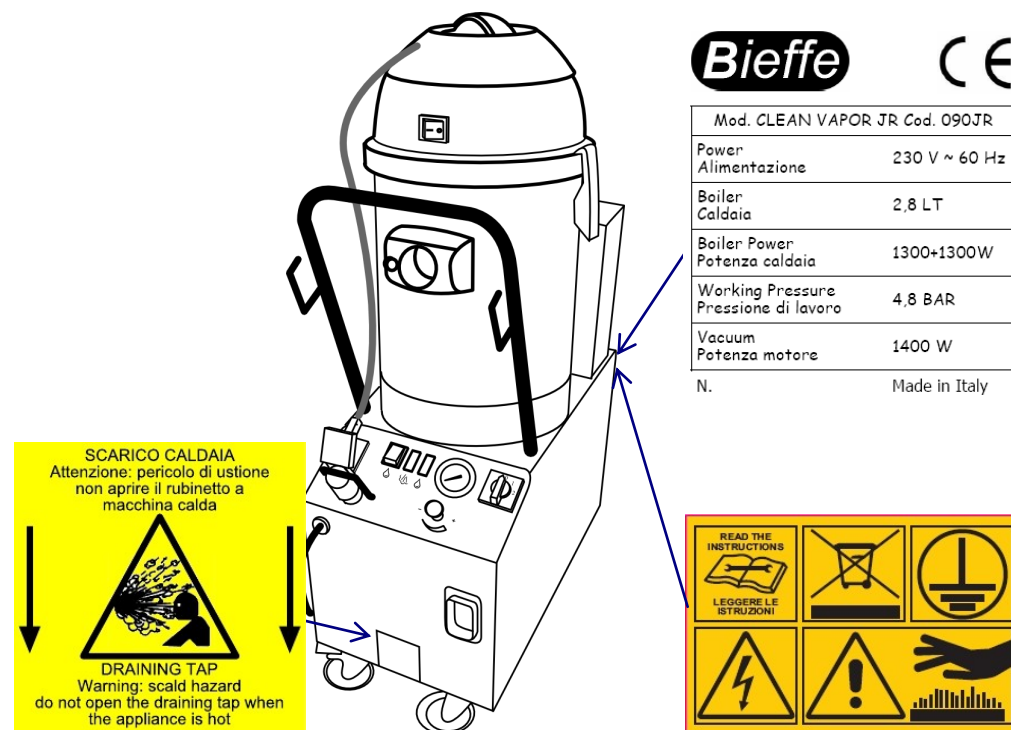

CAUTION
DO NOT REMOVE SAFETY DEVICE AND PROTECTIVE COVER
BEFORE MAINTENANCE AND SERVICE MAKE SURE THAT APPLIANCE IS
UNPLUGGED FROM ELECTRIC OUTLET AND BOILER IS COOL AND NOT
UNDER PRESSURE

CONSUMER NOTICE:

The BIEFFE product you have purchased is subject to Directive 2002/96/EC of the European Parliament and the Council of the European Union on waste electrical and electronic equipment (WEEE) and, in jurisdictions adopting that Directive, is marked as being put on the market after August 13, 2005, and should not be disposed of as unsorted municipal waste. Please utilize your local WEEE collection facilities in the disposition of this product and otherwise observe all applicable requirements.

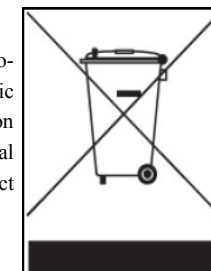

STANDARD ACCESSORIES



Cod. CVP
BIEFFE HANDLE INJECTION/EXTRACTION 2MT



Cod.CVA
UNIVERSAL ACCESSORIES HOLDER INJECTION/
EXTRACTION



Cod.CVB
PVC ROUND BRUSH D.30MM FOR CVA



Cod.CVC
EXTRACTION UPHOLSTERY NOZZLE 140MM



Cod.CVD
HEATER NOZZLE



Cod.CVE
EXTRACTION LANCE AND HEATER NOZZLE HOL-
DER



Cod.CVF
EXTRACTION ROUND DUST BRUSH

OPERATING INSTRUCTIONS

- Press button C in the handle CVP to get steam and/or detergent.
- Turn on the detergent switch 13 and turn on red switch D to get hot water/detergent.
- Turn the regulator knobs 17 to control steam, detergent and water flow.
- When the boiler is going to be empty, the pump recharges the boiler with water from the tank 6.
- When the tank is empty, a sound alarm is activated. During the alarm the machine stops working. To continue working, do not switch off the machine, fill in the tank 6 with water (Note: do not use distilled water) and remember to insert its loading hose.
- Press switch E on the handle CVP to operate the exhauster.
- TO GET A BETTER RESULT WE SUGGEST TO COMBINE THE STEAM JET AS WELL AS THE WARM WATER AND DETERGENT FOR A COMPLETE REMOVAL OF THE DIRT. COLLECT ALL RESIDUAL WITH THE EXHAUSTER INTO THE DRUM.

AT THE END OF THE WORKING SESSION, TURN OFF ALL SWITCHES AND UNPLUG THE BOILER. PUT THE APPLIANCE IN A DRY PLACE.

SERVICE

- At the end of every working session, clean the exhauster drum.
- At the end of every working session, clean the detergent pump. Remove the detergent loading hose from its tank and insert it in the boiler water tank. Press the detergent switch 16 on the handle CVP to get clean water through the pump.

SERVICE II


EMPTYING/CLEANING THE BOILER

- Unplug the machine. When the boiler is cold and not under pressure, open the draining tap under the machine to pour out the water from the boiler.
- **It is not necessary to pour out all remaining water each time you finish cleaning. Do the emptying/cleaning operations once a month (or more according to the use).**

SETTING UP

- Place the exauster 1, stainless steel drum and vacuum motor, on the steam generator 2. DO NOT USE THE DUST FILTER EMF IN CASE OF WATER-EXTRACTION.
- Connect the exauster power cord to the exauster power socket 3 on the control board. Switch on the exauster power switch 4.
- Be sure that the draining tap 5 is closed.
- Fill in the tank 6 with water (Note: do not use distilled water) and place it behind the steam generator. Fill in the detergent tank 7 with non foamy detergent and place it near the water tank 6. Insert the loading hoses in the respective tanks.
- Make sure that the detergent flow regulator knob is always open to let detergent go out thus avoiding any damage to the pump.
- Connect the handle CVP to the appliance. Insert the steam/water inlet A into the outlet 8 under the control panel, insert the exauster inlet B into the exauster outlet 9.
- Turn off all switches on the control panel and plug into ground outlet. Be sure the safety cap 11 is closed.
- Turn the power switch 11 on the position 1. If the boiler is empty a pump starts to load the boiler with water from the tank 6.
- When the boiler is full and the pump does not work, you can turn on the second heater (by turning the power switch 11 on position 2) to get a better and long lasting steam performance (Note: do not turn on the second heater when the boiler is not full).
- Before working, wait until the steam ready lamp 14 lights up and/or the pressure gauge 16 reaches 6ATM.

HANDLE CVP

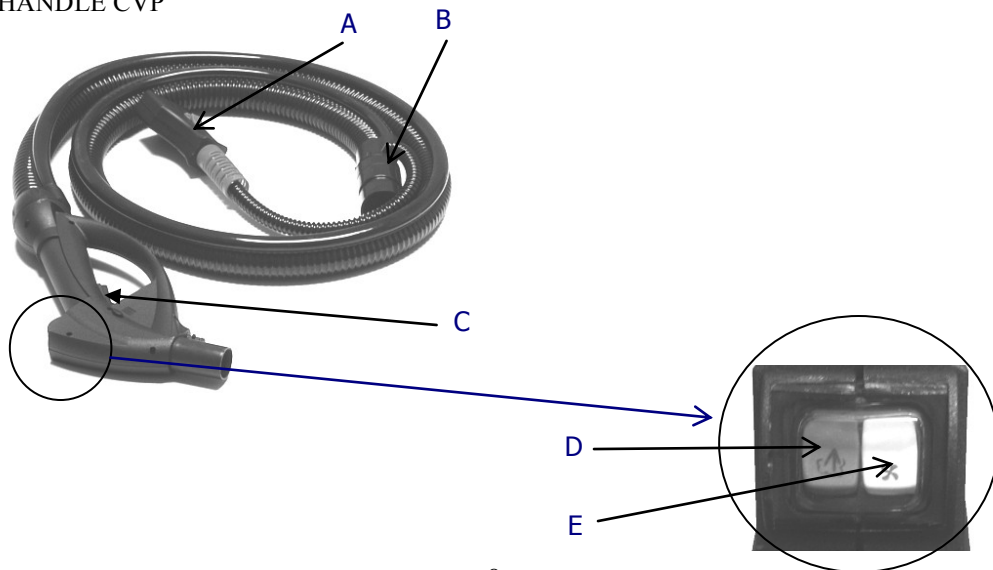

Cod. CVG1
INSERT HOLDER EXTRACTION/INJECTION
150MM



Cod. CVG2
RUBBER INSERT FOR CVG1



Cod. CVG3
BRUSH INSERT FOR CVG1



Cod. CVH
FLOOR TOOL 300MM



Cod. CVI
SQUEEGEE INSERT FOR CVH 300MM



Cod. CVL
FLOOR INSERT FOR CVH 300MM



Cod. CVM
CARPER INSERT FOR CVH 300MM



Cod. CVO
NR.2 EXTRACTION/INJECTION EXTENSIONS FOR
CVP 440MM



Cod. EMF
DUST FILTER. NOT TO BE USED IN CASE OF WATER-EXTRACTION



Cod. MGK01
STEAM GUN FLEXIBLE HOSE 2MT



Cod. MGK04
STEAM LANCE FOR MGH



Cod. MGL
PVC ROUND BRUSH D.30MM FOR STEAM LANCE



ADDITIONAL ACCESSORY FOR CLEAN VAPOR JUNIOR/VAPOHOTEL

Cod. CVK49
TOOL FOR CARPETS EXTRACTION/INJECTION 1000MM
To clean and sanitize the carpets. To be connected to the CVP

LEGENDA

- 1 Exhauster drum
- 2 Steam generator
- 3 Exhauster power socket
- 4 Exhauster power switch
- 5 Draining tap
- 6 5LT tank for only water
- 7 5LT tank for detergent
- 8 Water/steam/detergent outlet
- 9 Exhauster inlet
- 10 Power cord
- 11 Safety cap
- 12 Power switch
- 13 Detergent switch
- 14 Steam ready indicator
- 15 End of water indicator
- 16 Pressure gauge
- 17 Flow regulator knob
- A Steam/water inlet
- B Exhauster inlet
- C Steam/detergent push -button
- D Hot water switch
- E Exhauster switch

